

WEB SA

Základní okno zobrazené po přihlášení

Seznam ústředen

Správa uživatelů, časové plány,
paměť událostí, reporty

The screenshot displays the DLS WebSA web interface. At the top left, the text "DLS WebSA Home" is visible. At the top right, it says "Welcome admin | Logout". The main content area is divided into several sections:

- Recent Accounts:** A table with a header "hk" and a search icon. Below the header, there are icons for user management, calendar, and reports.
- DLS WebSA:** A central panel with a dropdown menu for "Account Name" showing "hk".
- Operator's Last Successful Login:** A widget showing the date and time "14 Mar 2016 10:01 AM".
- Please Contact your installer or security service provider:** A warning message.
- DSC:** A widget for DSC (Digital Security Controller).
- Critical updates:** A widget showing "0 of 0 updates".
- tyco Security Products:** A logo for Tyco Security Products.

At the bottom left, there is a "WEB" logo. At the bottom right, there is a small user profile icon with the name "hk". The footer contains the text "Copyright © 2014 Tyco. All Rights Reserved."

Popis menu

Úvodní stránka, Správa připojení k ústřednám, Výše uvedené okno o stavu ústředny, Správa uživatelů, Časové plány, Paměť událostí, Reporty, Nastavení programu, Změna hesla uživatele

The screenshot displays a web-based dashboard for a security system. At the top, a navigation bar contains icons for home, document, signal, user, calendar, checkmark, bar chart, tools, and settings. The user is logged in as 'admin' and can click 'Logout'. The main content area is titled 'Dashboard - hk' and is divided into two primary sections: 'hk (Go Live)' and 'Hala'. The 'hk (Go Live)' section includes widgets for 'Hala' and 'Trezor' status, a clock showing 'NaN ONaN NaN:NaN PM', 'Module Status' with a battery icon, 'PGMs' with a circular arrow icon, and a 'TEST' button. The 'Hala' section features a grid of status tiles: 'Hala' (house icon), 'Vstupní dveře' (door icon), 'PIR hala' (PIR sensor icon), 'Tisen u PC' (PC icon), 'PIR reditel' (PIR sensor icon), and a refresh button. A 'WEB' button is located at the bottom left, and a small 'hk' status icon is at the bottom right. The footer contains the copyright notice: 'Copyright © 2014, Tyco. All Rights Reserved.'

Popis menu

Lze vybrat konkrétní blok

Zap/vyp bloku

Seznam zón v bloku

Vybranou zónu lze odbořit

The screenshot shows a dashboard with a top navigation bar containing icons for home, documents, calendar, and user profile. Below the navigation bar, there are two main sections: 'hk (Go Live)' and 'Hala'. The 'hk (Go Live)' section contains several green control buttons: 'Hala', 'Trezor', 'Module Status', 'PGMs', and 'TEST'. The 'Hala' section contains a grid of buttons for 'Vstupni dveře', 'PIR hala', 'Tisen u PC', 'PIR reditel', and a 'Bypass Function' button. A callout box labeled 'Lze vybrat konkrétní blok' points to the 'Hala' button. Another callout labeled 'Zap/vyp bloku' points to the 'Vstupni dveře' button. A third callout labeled 'Seznam zón v bloku' points to the 'PIR hala' button. A fourth callout labeled 'Vybranou zónu lze odbořit' points to the 'Bypass Function' button. At the bottom of the dashboard, there is a 'WEB' button and a user profile icon labeled 'hk'. The footer contains the text 'Copyright © 2014, Tyco. All Rights Reserved.'

Popis tlačítek – zapnutí bloku, vypnutí bloku, stav zón, Povolení/zakázání auto. zapnutí, Zvonkohra, Kontrola vypnutí, Bzučák klávesnice, ovládání PGM výstupů

The screenshot shows the same dashboard as above, but with a callout box pointing to the 'Vstupni dveře' button in the 'Hala' section. The callout box is empty, suggesting it is intended for a description of that button. The rest of the dashboard layout is identical to the previous image. The footer contains the text 'Copyright © 2014, Tyco. All Rights Reserved.'

Mezi bloky se lze přepínat

Vždy se zobrazí seznam zón v bloku

The image shows a screenshot of a web-based dashboard interface. At the top, there is a navigation bar with icons for home, document, user, calendar, refresh, bar chart, and settings. The main content area is divided into two primary sections: "hk (Live)" on the left and "Trezor" on the right. The "hk (Live)" section contains several widgets: "Hala" with a camera icon, "Trezor" with a camera icon, a clock showing "NaN ONaN NaN:NaN PM", "PGMs" with a circular arrow icon, and "TEST" with a diamond icon. The "Trezor" section contains a grid of widgets: "Dvere trezor" with a padlock icon, "Otres trezor" with a padlock icon, and a calendar icon. A "Module Status" widget is also present between the two sections. The bottom of the dashboard features a "WEB" logo on the left and a user profile icon labeled "hk" on the right. The footer contains the text "Copyright © 2014, Tyco. All Rights Reserved." Two callout boxes are overlaid on the dashboard: one on the left pointing to the "hk (Live)" section with the text "Mezi bloky se lze přepínat", and one on the right pointing to the "Trezor" section with the text "Vždy se zobrazí seznam zón v bloku".

Správa uživatelů

The screenshot shows a web-based user management interface. At the top left, there is a 'Users - hk' header. Below it, a list of users is shown with columns for 'User Name', 'Spravce', 'Radek', and 'Vrchota'. A callout box labeled 'Seznam uživatelů v EZS' points to this list. In the center, the 'Partitions' section is visible, showing 'Partition 1 - Hala' and 'Partition 2 - Trezor' with toggle switches. A callout box labeled 'Bloky, které má právo ovládat' points to this section. On the right, the 'User Code' field is set to '1111' and the 'User Name' field contains 'skacelova'. A callout box labeled 'Jméno vybraného uživatele, jeho přístupový kód' points to these fields. Below the 'Partitions' and 'User Code' sections, there is an 'Attributes' section with various toggle switches: 'Remote Access', 'Bypass', 'Duress', 'One Time Use', 'Supervisory', 'Bell Squawk', and 'Prox. Tag'. A callout box labeled 'Atributy uživatele' points to this section. At the bottom left, there is a 'WEB' button. At the bottom right, there is a 'hk' logo. The footer contains the text 'Copyright © 2014 Tyco. All Rights Reserved.'

Poznámka: Jména se musí zadávat bez české diakritiky, jinak budou zkomolená na ústředně

Atributy uživatele

Poznámka: Kód pod nátlakem na DSC ústřednách může být libovolný přístupový kód, který má povolen atribut Duress.

Poznámka: Do systému nelze vkládat 2 uživatele se stejným přístupovým kódem nebo jménem

Poznámka: Nové uživatele a jejich přístupové kódy lze programovat i při zapnutém systému

Časové plány

Pro každý blok lze nastavit časový plán pro automatické zapnutí/vypnutí bloku. Pro každý den v týdnu lze nastavit jiný čas. V případě vypnutí bloku se dále nastavují data svátků, kdy k vypnutí nedochází.

The screenshot displays the 'Schedules - hk' configuration page in a web browser. The interface is dark-themed with green accents. At the top, there is a navigation bar with icons for home, documents, a calendar, a checklist, a bar chart, a wrench, and a user profile. The user is logged in as 'admin'.

The main content area is titled 'Schedules - hk' and contains the following sections:

- All Schedules:** A list on the left with 'Hala' and 'Trezor' selected.
- Autoarm Time:** A table showing 'Disabled' status for all days of the week (Sunday through Saturday).
- AutoDisarm Time:** A table showing 'Disabled' status for all days of the week (Sunday through Saturday).
- Holiday Groups:** A list of four groups (Group 1 to Group 4), each with a toggle switch set to '0'.

At the bottom of the configuration area, there are buttons for '+', 'Save', 'Refresh', and 'Cancel'. The footer includes a 'WEB' logo, a 'hk' icon, and the copyright notice: 'Copyright © 2014, Tyco. All Rights Reserved.'

Paměť událostí

Zobrazují se zde události ústředny

filtrování událostí podle
zadaných kritérií

The screenshot shows a web-based event log interface. At the top, there is a navigation bar with icons for home, documents, a calendar showing '18', and a search icon. The main header reads 'Event Buffer - hk' and 'Welcome admin | Logout'. Below the header is a filter bar with dropdown menus for 'All partitions', 'All Users', 'Start Date', 'End Date', and 'Keyword', followed by an 'All Events' dropdown and a search icon. The main area contains a table of events with columns for Partition, Date/Time, and Event. The table lists various events such as 'Event Buffer Appended', 'System Administrator Software Lead In', and 'Armed in Away Mode'. At the bottom, there is a pagination control showing '1 2 3 4 5 6 7 8 9 10 ...' and 'Events Per Page 25'. A 'WEB' logo is visible in the bottom left corner, and a small 'hk' icon is in the bottom right corner.

Partition	Date/Time	Event
0	3/14/2016 12:10 PM	Event Buffer Appended
System Area	3/14/2016 12:09 PM	System Administrator Software Lead In
System Area	3/14/2016 11:51 AM	System Administrator Software Lead Out
Trezor	3/14/2016 11:20 AM	Opening By User 1 - Spravce
0	3/14/2016 11:27 AM	Event Buffer Appended
Hala	3/14/2016 11:19 AM	Opening By User 1 - Spravce
0	3/14/2016 11:21 AM	Event Buffer Appended
Trezor	3/14/2016 11:20 AM	Opening By User 1 - Spravce
Hala	3/14/2016 11:19 AM	Opening By User 1 - Spravce
0	3/14/2016 11:20 AM	Event Buffer Appended
Hala	3/14/2016 11:19 AM	Armed in Away Mode
Hala	3/14/2016 11:19 AM	Closing By User 2 - [redacted]
Trezor	3/14/2016 11:19 AM	Armed in Away Mode
Trezor	3/14/2016 11:19 AM	Closing By User 1 - Spravce
Hala	3/14/2016 11:19 AM	Panic Alarm Restore Keypad 1 - Keypad 1
Hala	3/14/2016 11:19 AM	Panic Alarm Keypad 1 - Keypad 1
Hala	3/14/2016 11:19 AM	Opening By User 5 - [redacted]
Hala	3/14/2016 11:19 AM	Duress Alarm
Trezor	3/14/2016 11:18 AM	Armed in Away Mode
Trezor	3/14/2016 11:18 AM	Closing By User 1 - Spravce
Hala	3/14/2016 11:18 AM	Armed in Away Mode
Hala	3/14/2016 11:18 AM	Closing By User 1 - Spravce
Trezor	3/14/2016 11:18 AM	Armed in Away Mode
Trezor	3/14/2016 11:18 AM	Closing By User 1 - Spravce
Hala	3/14/2016 11:18 AM	Armed in Away Mode

Například události týkající se bloku Trezor

Event Buffer - hk

Trezor All Users Start Date End Date Keyword All Events

Partition	Date/Time	Event
Trezor	3/14/2016 11:20 AM	Opening By User 1 - Spravce
Trezor	3/14/2016 11:20 AM	Opening By User 1 - Spravce
Trezor	3/14/2016 11:19 AM	Armed in Away Mode
Trezor	3/14/2016 11:19 AM	Closing By User 1 - Spravce
Trezor	3/14/2016 11:18 AM	Armed in Away Mode
Trezor	3/14/2016 11:18 AM	Closing By User 1 - Spravce
Trezor	3/14/2016 11:18 AM	Armed in Away Mode
Trezor	3/14/2016 11:18 AM	Closing By User 1 - Spravce

Events Per Page 25

PDF XML

Copyright © 2014, Tyco. All Rights Reserved.

Události lze dále exportovat do PDF nebo XML

Stand Alone Download Location

Report Name : C:\Users\VMS\AppData\Local\Temp\events.pdf

Yes

Zobrazí se okno, kam se události uložily.

Odkaz stačí zkopírovat a otevřít.

C:\Users\VMS\AppData\Local\Temp\events.pdf

Prohledat: Knihovny


Uspořádat Nová knihovna

Knihovny

- Dokumenty Knihovna
- Obrázky Knihovna
- Hudba Knihovna
- Videa Knihovna

Položky: 4

Zobrazení vypadá tímto způsobem:

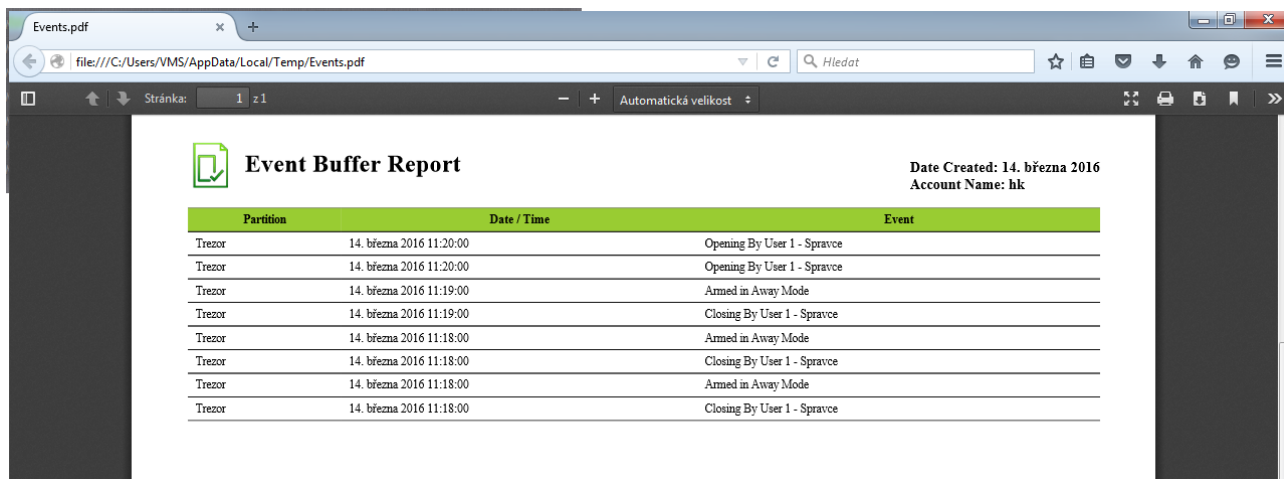


The screenshot shows a PDF viewer window titled 'Events.pdf'. The address bar displays the file path: file:///C:/Users/VMS/AppData/Local/Temp/Events.pdf. The report content includes a title 'Event Buffer Report', a date 'Date Created: 14. března 2016', and an account name 'Account Name: hk'. Below this is a table with three columns: 'Partition', 'Date / Time', and 'Event'. The table contains eight rows of event data.

Partition	Date / Time	Event
Trezor	14. března 2016 11:20:00	Opening By User 1 - Spravce
Trezor	14. března 2016 11:20:00	Opening By User 1 - Spravce
Trezor	14. března 2016 11:19:00	Armed in Away Mode
Trezor	14. března 2016 11:19:00	Closing By User 1 - Spravce
Trezor	14. března 2016 11:18:00	Armed in Away Mode
Trezor	14. března 2016 11:18:00	Closing By User 1 - Spravce
Trezor	14. března 2016 11:18:00	Armed in Away Mode
Trezor	14. března 2016 11:18:00	Closing By User 1 - Spravce


Reporty

každý report lze uložit do PDF nebo XML souboru

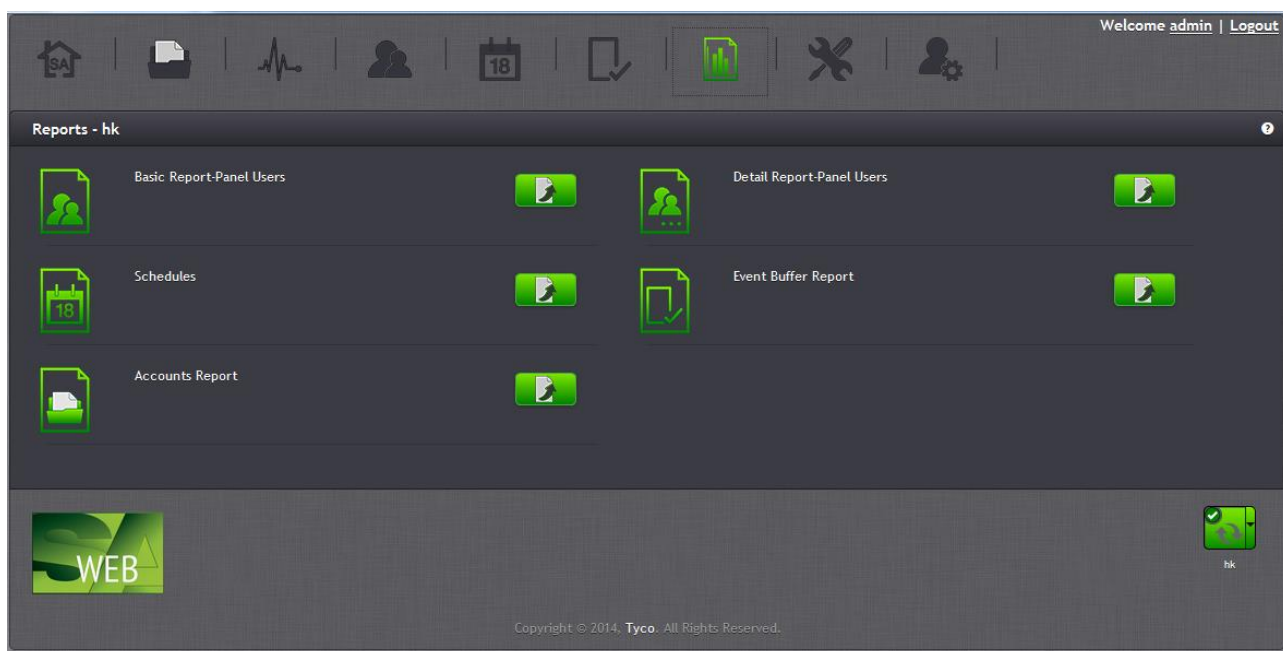


- Basic Report-Panel Users** - seznam uživatelů v EZS
- Schedules** - nastavení časových plánů pro jednotlivé bloky
- Detail Report-Panel Users** - seznam uživatelů, jejich PIN kódy, přiřazené bloky atd.
- Event Buffer Report** - kompletní paměť událostí

Správa uživatelů s přístupem do SW WEB SA a jejich oprávnění (Role)

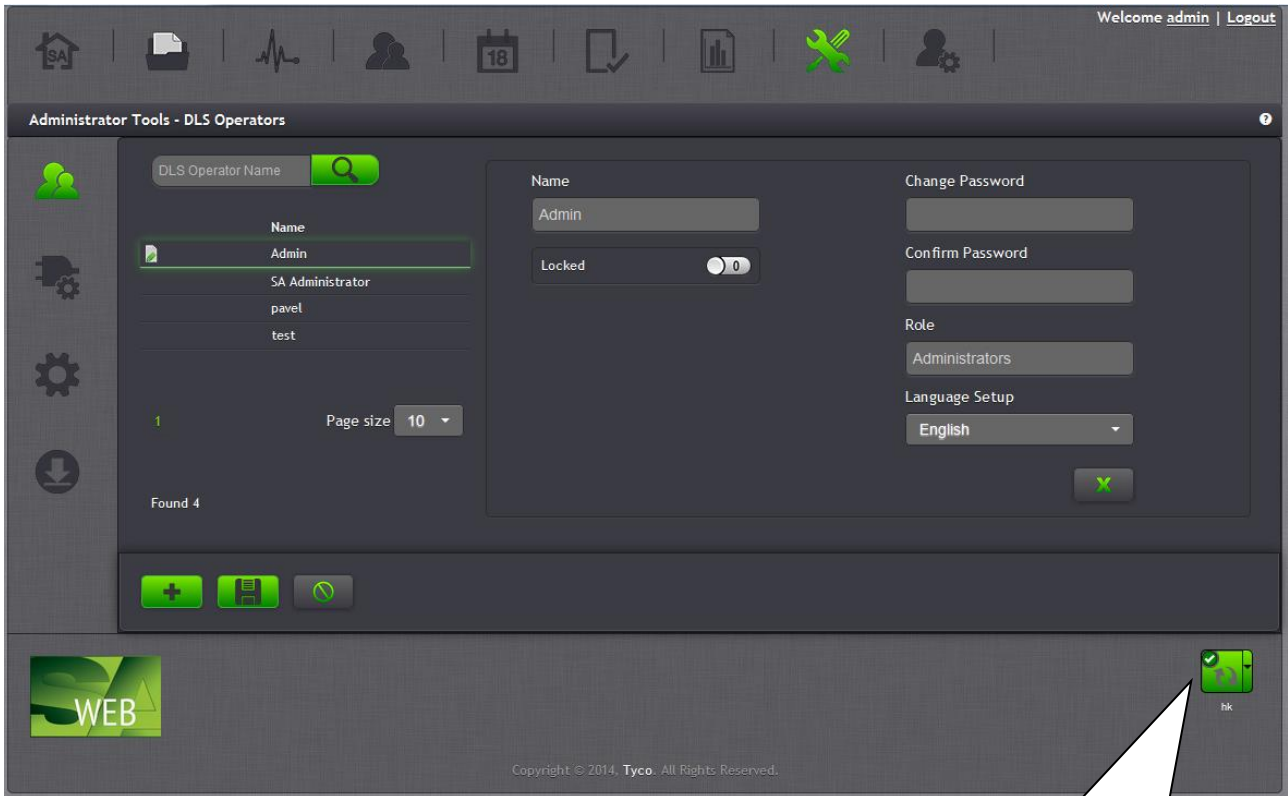

Ve spodní části se zobrazuje stav komunikace s ústředni EZZ.

Při práci s ústřednou (správa uživatelů, prohlížení paměti událostí) dojde k automatickému navázání spojení s ústřednou. Kdykoli lze vynutit komunikaci s ústřednou nebo provést synchronizaci nastavení.

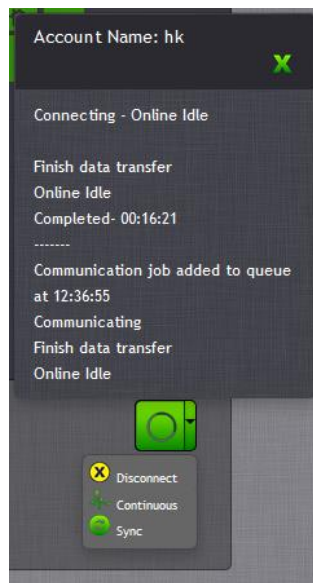

Nastavení komunikace s EZS ústřednou

U IP komunikace se nastavují následující údaje:

- IP adresa
- port (3092)
- přístupový kód (např. 123456) – sekce [407]

The screenshot displays a web application interface for managing communication accounts. At the top, there is a navigation bar with icons for home, documents, a pulse line, a person, a calendar, a checkmark, a bar chart, a wrench, and a person with a gear. The user is logged in as 'admin' and can click 'Logout'.

The main content area is titled 'Accounts'. On the left, there is a search bar for 'Account Name' with a dropdown arrow. Below it, a list of accounts is shown, with 'hk' selected. A search input field contains '[Enter Name]2'. A 'Found 2 accounts' message is visible at the bottom left.

The selected account 'hk' is shown in a detailed view. It has a 'Contact' section and a 'Panel Details' section. The 'Panel Details' section includes the following information:

Panel ID Code	2128000000
SA Access Code	123456
IP	192.168.140.67
PSTN (Incoming)	
PCLink	COM1

Below the 'Panel Details' is a 'Comments' section with a table of activity:

Created Date	09 Mar 2016 1:46 PM
Modified Date	09 Mar 2016 1:47 PM
Last Synced	14 Mar 2016 11:10 AM

On the right side of the account view, there are configuration options for IP communication:

- SA Access Code: 123456
- Connection Type: IP (dropdown menu)
- SA Access Code: 123456
- IP: 192.168.140.67
- Port: 3092
- Receiver IP: 127.0.0.1
- Receiver Port: 3064
- Receiver Password: [masked]
- System Account Code: [empty field]
- Is TLink:
- Use Alternate Table:

At the bottom right, there are two toggle switches: 'Show Deleted Accounts' and 'Show Unsupported Accounts', both currently turned off.